



SRT40

Rebar Tying Tool

Parts Reference Guide

Guía de referencia de piezas

Pièces Guide de référence

Schematic Drawings Inside

Plano esquemático en el interior


Schéma intérieur



Kyocera Senco Europe
Pascallaan 88
8218 NJ Lelystad
The Netherlands
senco.eu

NFE09V3 • July 13th 2023 (replaces 04/07/2022)

© 2022 by Kyocera Senco Europe

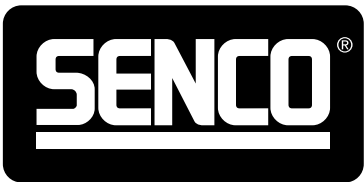


Tool	Model
9VS2002N	SRT40 EU
9VS7002N	SRT40 UK*

*SRT40 UK incl. UK plug adapter # EBA22071 not shown

Rebar Tying Tool

SRT40

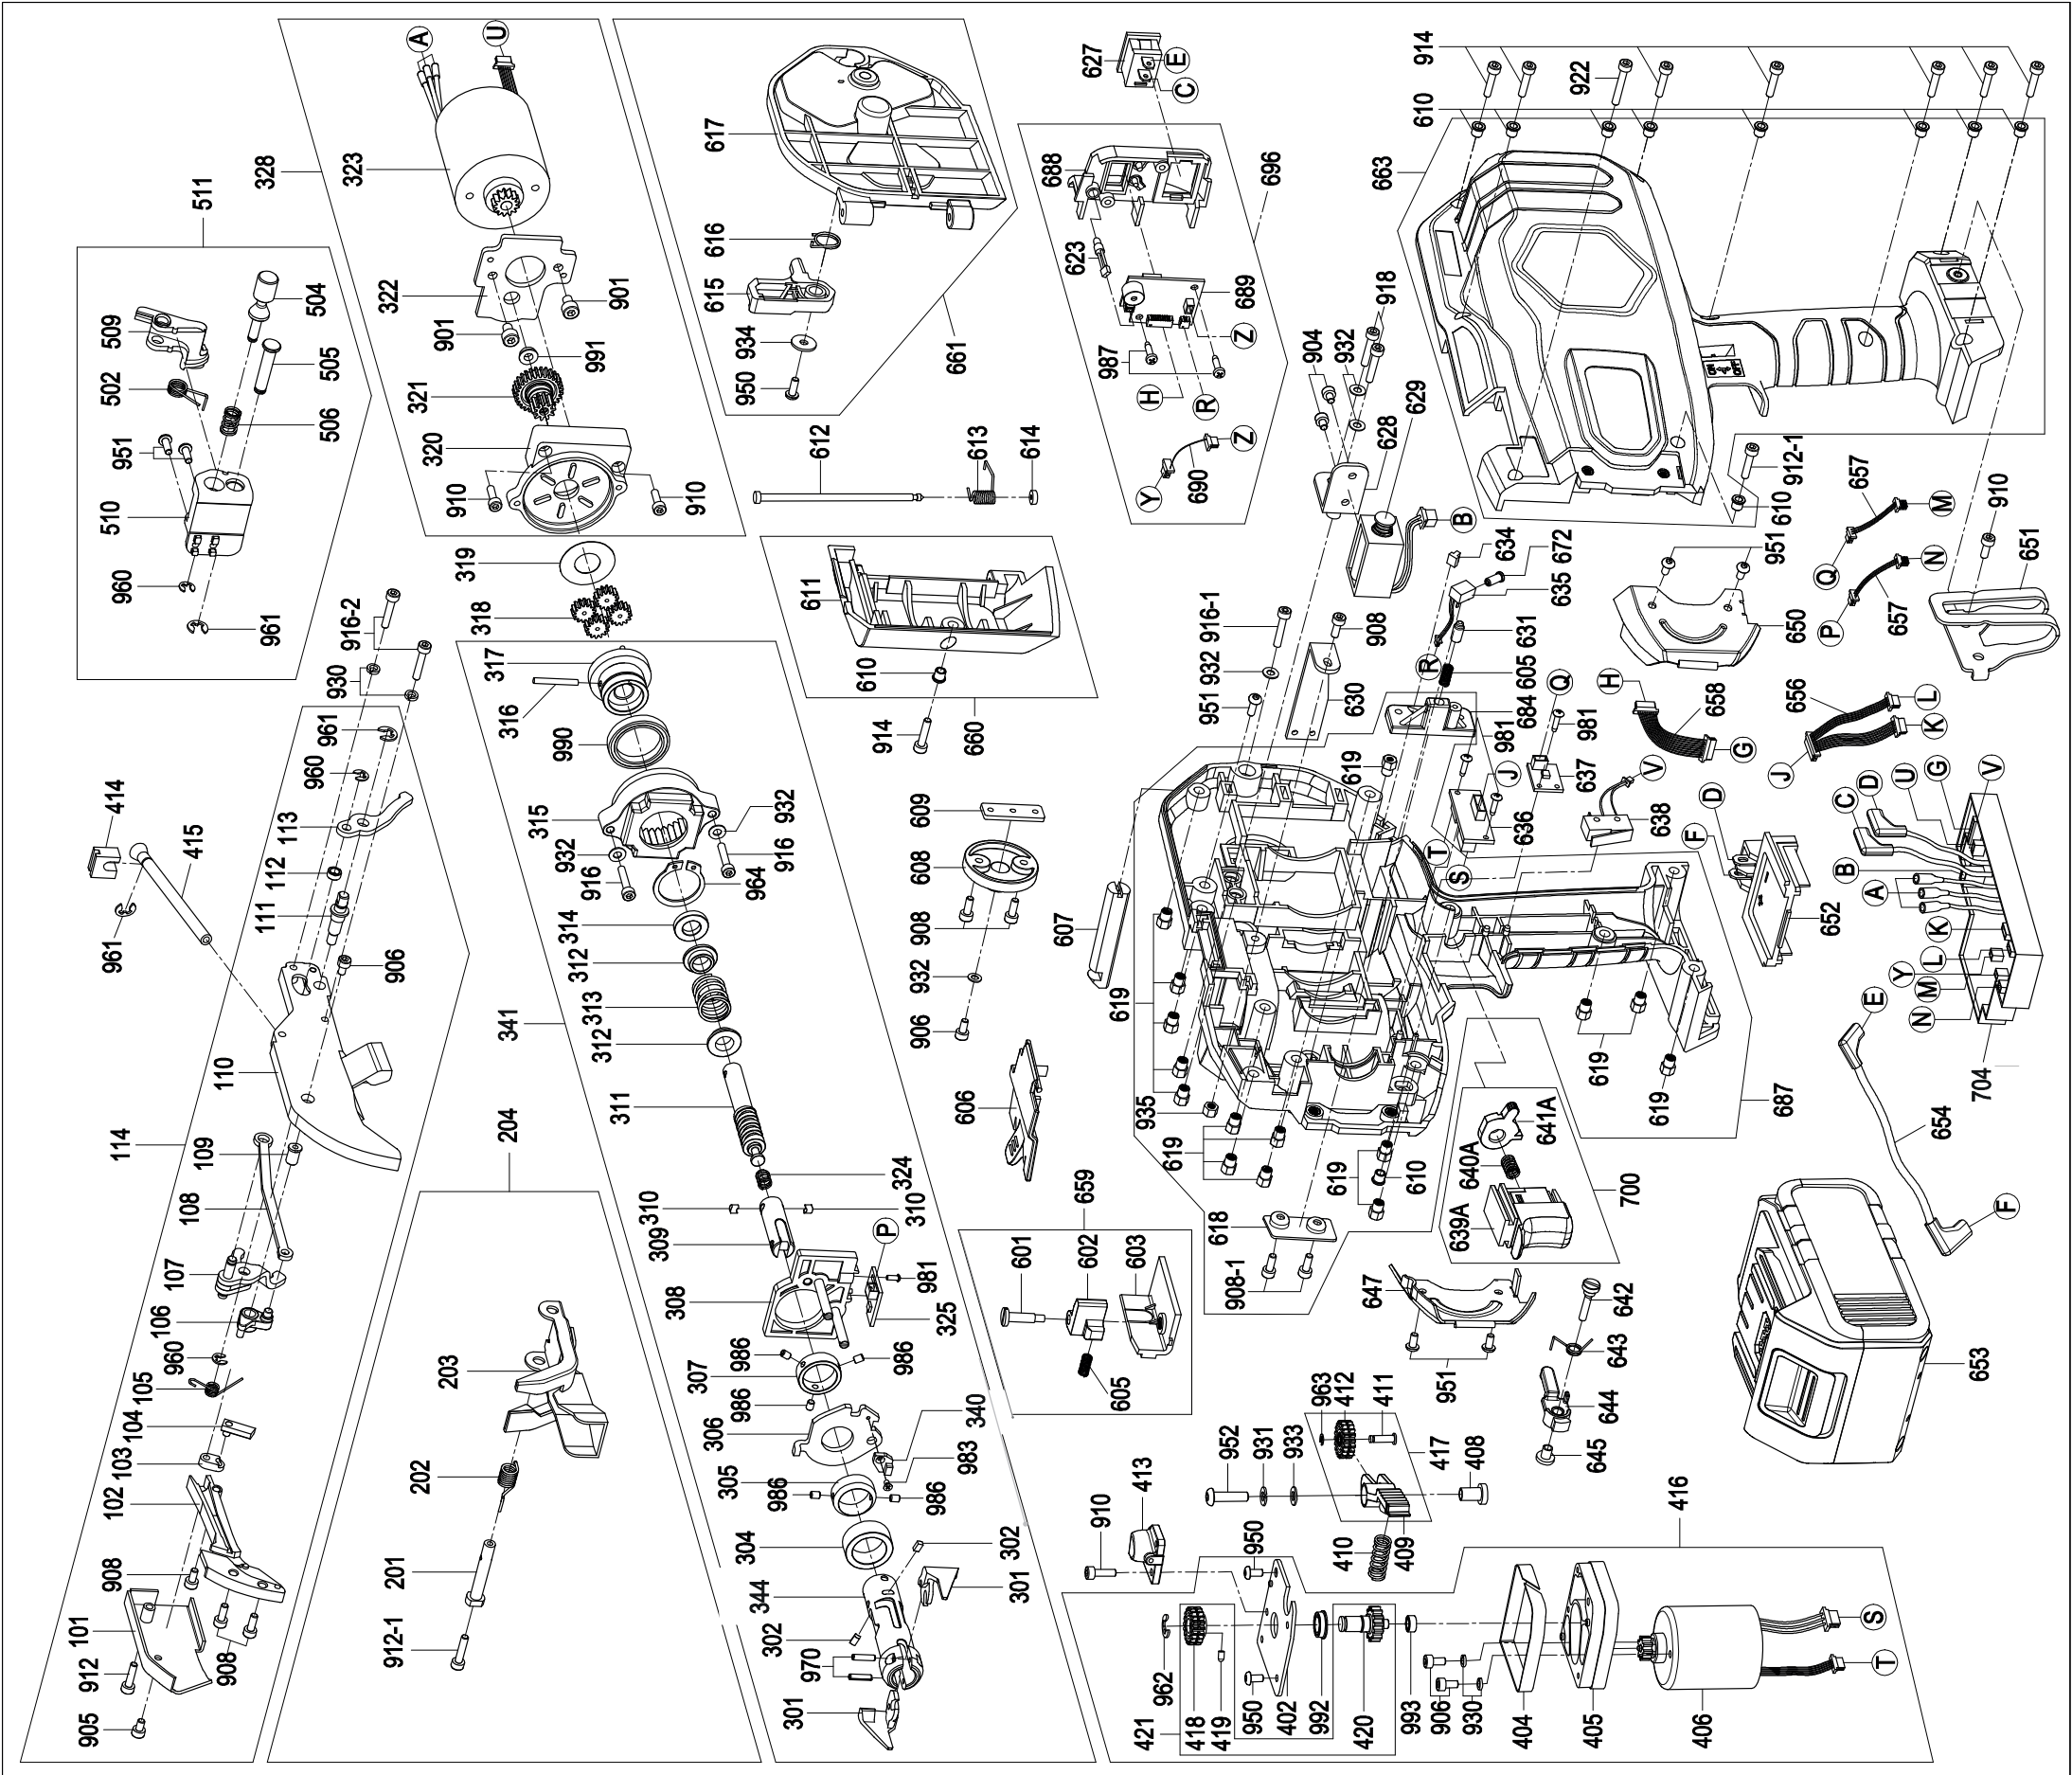



Rebar Tying Tool

SRT40

REPLACEMENT PARTS LIST • LISTA DE PARTES DE REPUESTO • ERSATSTEILE-LISTE • LISTE DE PIÈCES DE RECHANGE

ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION	ITEM NO.	PART NO.	DESCRIPTION
101	81013SRT	Arm A	609	17210SRT	Fixing Plate 1	981	13328SRT	Pan-head Screw ST2.2x6
102	81020SRT	Wire Guide A	610	18040SRT	Hollow Pin 7	983	13298SRT	Countersunk screw M2x4
103	11072SRT	Connecting Plate 1	611	86117SASRT	Motor Cover	986	89866SRT	Hex Screw M3x3
104	81044SRT	Fixed Cutter	612	86124SRT	Step Pin 3	987	89873SRT	Pan-head Screw ST3x
105	81051SRT	Torsion Spring 1	613	15049SRT	Torsion Spring 5	990	13205SRT	Bearing 1
106	81068SRT	Cutter	614	15056SRT	Rubber Washer	991	89910SRT	Bearing 2
107	80175SRT	Cutter Lever A	615	86155SASRT	Reel Stopper	992	89927SRT	Bearing 3
108	81082SRT	Connecting Rod 1	616	86162SRT	Torsion Spring 6	993	89934SRT	Bearing 4
109	81099SRT	Cutter Sleeve	617	86179SRT	Reel Stay	986	89866SRT	Hex Screw M3x3
110	81105SRT	Arm A unit	618	86186SRT	Strength Plate	990	13205SRT	Bearing 1
111	81112SRT	Shaft Screw	619	17111SRT	Nut M3	991	89910SRT	Bearing 2
112	81129SRT	Washer 4	623	16046SRT	LED Unit	992	89927SRT	Bearing 3
113	81136SRT	Cutter Lever C	627	16015SRT	Main Switch Unit	993	89934SRT	Bearing 4
114	81143SRT	Arm A Unit Assy	628	86285SRT	Solenoid Holder			
201	82010SRT	Stopper Shaft	629	86292SRT	Solenoid			
202	82027SRT	Torsion Spring 3	630	86308SRT	Fixing Plate 2			
203	82034SRT	Curl Guide	631	86315SRT	Jaw Pin			
204	82041SRT	Curl Guide Assy	634	86346SRT	Socket Cap			
301	83017SRT	Hook	635	86353SRT	Socket			
302	83024SRT	Key A	636	86360SRT	Feeding PWB unit			
304	83048SRT	Sleeve Guide	637	17326SRT	Sensor PWB D Unit			
305	83055SRT	Cutting Ring Guide	638	17265SRT	Trigger Switch			
306	83062SRT	Cutting Plate	639	86391SASRT	Trigger			
307	83079SRT	Cutting Ring Washer	640	86407SRT	Comp. Spring 5			
308	13069SRT	Tip Axis Guide Assy	641	86414SASRT	Trigger Lock			
309	83093SRT	Tip Axis B	642	17517SRT	Bolt			
310	13120SRT	Key B	643	86438SRT	Torsion Spring 4			
311	83116SRT	Tip Axis A	644	86445SRT	Switch Lever			
312	83123SRT	Pin 1	645	17364SRT	Pin 4			
313	13168SRT	Comp. Spring 2	647	86476SRT	Cover L Unit			
314	83147SRT	Bumper	650	86506SRT	Cover P Unit			
315	83154SRT	Internal Gear	651	86513SRT	Belt Hook			
316	13229SRT	Pin 5	652	86520SRT	Electrode Unit			
317	83178SRT	Planet Gear Unit	653	86537SASRT	18V Li-ion Battery			
318	13236SRT	Planet Gear	654	86544SRT	Battery Connecting Wire			
319	13243SRT	Gear Press Wheel	656	86568SRT	Feeding Motor Connecting Wire			
320	83208SRT	Twisting Motor Gearbox	657	86575SRT	Sensor Connecting Wire			
321	83215SRT	Sun Gear Unit	658	86582SRT	Adjusting Connecting Wire			
322	83222SRT	Motor Fixing plate	659	86599SASRT	Reel Stopper Assy			
323	83239SRT	Twisting Motor Unit	660	86605SASRT	Motor Cover Assy			
324	13137SRT	Comp. Spring 1	661	86612SASRT	Reel Stay Assy			
325	13311SRT	Route PWB Unit	663	86636SASRT	Frame R Assy			
328	83284SRT	Twisting Motor Assy	672	86704SRT	Plastic cap			
340	83406SRT	Magnetic Plate	684	86841SRT	Jaw			
341	83413SRT	Twister Assy	687	86872SASRT	Frame L Assy (incl. Jaw)			
344	83444SRT	Sleeve A	688	86889SRT	DD Adjusting Plate			
402	84021SRT	Partition Plate	689	86896SRT	Adjusting PWB Unit			
404	84045SRT	Dust-Proof strip	690	86902SRT	DD Screen Connecting Wire			
405	84052SRT	Feeding Motor Gearbox	691	86919SRT	Main Switch Base Assy			
406	84069SRT	Feeding Motor Unit	704	87046SRT	Main PWB Unit			
408	84083SRT	Hollow Pin 1	901	89019SRT	Hex Bolt M4X6			
409	14028SRT	Release Lever	904	12536SRT	Hex Bolt M3X4			
410	14035SRT	Comp. Spring 3	905	89057SRT	Hex Bolt M3x5			
411	14158SRT	Step Pin 1	906	11034SRT	Hex Bolt M3x6			
412	14141SRT	Feeding Gear B2	908-1	12024-1SRT	Hex Bolt M3x8(With thread lock)			
413	84137SRT	Wire Guide C	910	11225SRT	Hex Bolt M3x10			
414	84144SRT	Rubber Base	912-2	11027-2SRT	Hex Bolt M3x12(with thread lock)			
415	84151SRT	Pipe	914	17449SRT	Hex Bolt M3x14			
416	84168SRT	Feeding Motor Assy	916	17487SRT	Hex Bolt M3x16			
417	14165SRT	Release Lever Assy	916-1	17487-1SRT	Hex Bolt M3x16(SS)			
418	84175SRT	Feeding Gear B1	916-2	17487-2SRT	Hex Bolt M3x16(with thread lock)			
419	84182SRT	Pin 7	922	89224SRT	Hex Bolt M3x22			
420	84199SRT	Feeding Gear Shaft	930	12178SRT	Spring Washer φ3			
502	12499SRT	Torsion Spring 7	931	14219SRT	Spring Washer φ4			
504	85042SRT	Reel Press limit Axis	932	14058SRT	Washer			
505	12482SRT	Reel Press Centre Axis	933	14226SRT	Washer 2			
506	12468SRT	Comp. Spring 7	934	15070SRT	Washer 3			
509		Reel Press A	935	17050SRT	Nut M3 (T4)			
510		Reel Press D	950	89507SRT	Button Head Screw M3X6			
511	85110SRT	Brake Housing Assy	951	17128SRT	Button Head Screw M3X8			
601	86018SRT	Step Pin 2	952	89521SRT	Button Head Screw M4X20			
602	86025SASRT	Release Stopper	960	12543SRT	E-ring 3			
603	86032SRT	Reel Stopper	961	11133SRT	E-ring 4			
605	17166SRT	Comp. Spring 4	962	89620SRT	E-ring 5			
606	86063SRT	Window	963	12048SRT	E-Ring 2			
607	86070SRT	Joint Reel Magazine	964	13182SRT	C-ring 20			
608	17029SRT	Reel Guide	970	13342SRT	Spring Pin φ2.5			